

IMPORTANT! Model 975 Remote Control Information Update

Model 975 Remote Control Addendum

 
Your Model 975's remote control is a dual function remote. It can control both the functions of the Model 975 Preamp/Processor and when programmed, other components in your system.

Please take a moment to review the information on this sheet in order to take advantage of all the 975 remote control's features.

Errata

Please use the information below in place of the figures and text from the section titled "Selecting a Source" on page 35 of the Owner's Manual.

Selecting an input

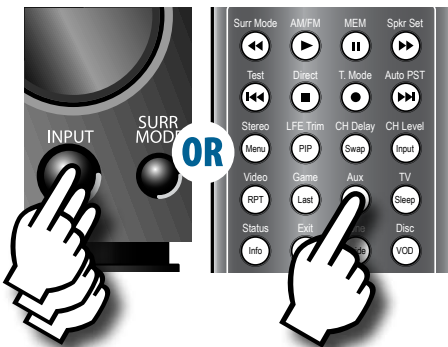

▶ To select a source with the remote control:

 
1. Press the TNR button at the top of the remote.
2. Press one of the source buttons (AM/FM, Video, Game, Aux, TV, or Disc) on the remote control.

The names of the input sources are indicated by the labels printed above the buttons on the remote control.

▶ To select a source from the Model 975 front panel:

Press the INPUT button on the front panel to cycle through the input sources.

The front panel display will show the selected source.

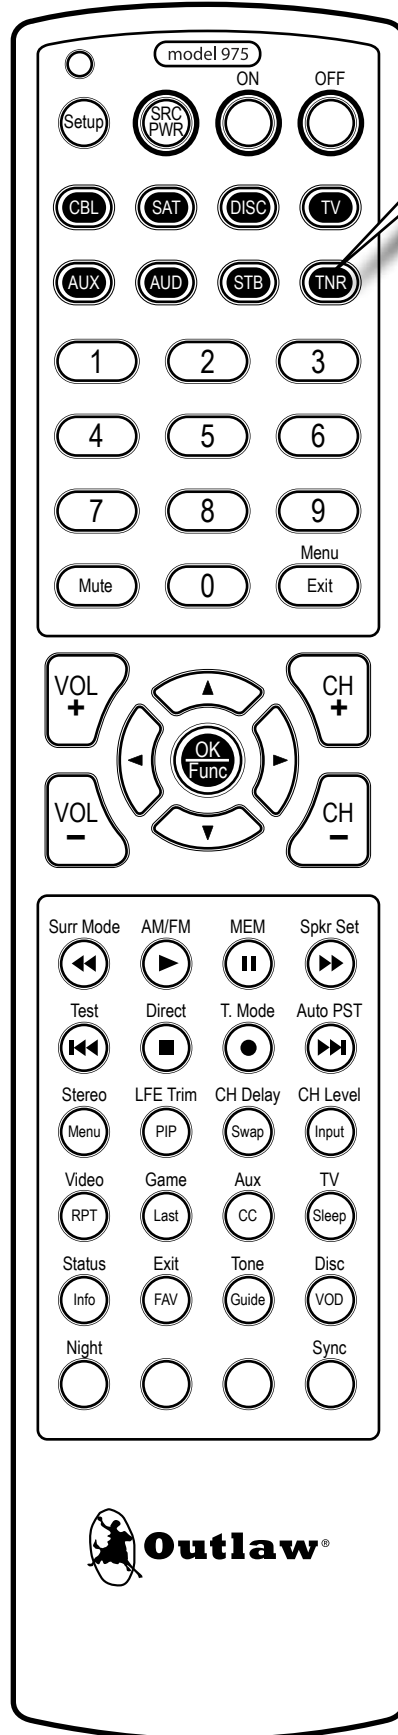

PLEASE NOTE: To operate the functions of the Model 975, access the setup menus, or select a source input, you must first press the TNR button. Once pressed, you can directly control the functions of the Model 975 indicated by the labels printed above each button on the remote.

Remote Control Overview

The Model 975's remote control is divided into three main sections. The main functions of each is described below:

A. POWER / COMPONENT SELECT / NUMERIC buttons

This section of the Remote Control is used to power the Model 975 on and off, and to select the components in your system to control when the remote is in its programmed mode. You can also access the setup menus from here, as well as enter numbers when needed.

▶ The component selection buttons at the top of the remote control cannot be used to select the input on the Model 975. To change the input source on the Model 975, follow the steps in "Selecting a Source" shown at left.

B. DIRECTIONAL / CHANNEL AND VOLUME buttons

These buttons are used to navigate through menus, and control volume and channel selection for the device being controlled by the remote.

C. DIRECT ACCESS / DEVICE CONTROL buttons

These buttons have dual roles. The labels printed above each button indicate a direct control function of the Model 975 operated by the remote when the TNR button has been pressed. The labels printed directly on the buttons represent functions operated by the remote control for the device selected by pressing one of the system component buttons you've programmed (CBL, SAT, DISC, etc.) at the top of the remote.

Remote Control Operation

You can use the remote control to operate the functions of the Model 975, as well as other components in your system.

▶ To select a device for the remote control to operate:

1. To control the functions of the Model 975, press the TNR button at the top of the remote.

Use the remote control to access the Model 975's controls and setup menus as described in the Owner's Manual. In this mode, functions controlled by the remote are indicated by the labels printed above the buttons.

2. To operate the functions of another device in your system, press the appropriate component selection button (CBL, SAT, DISC, etc.) from the top of the remote control.

When in this mode, functions controlled by the remote are indicated by the labels printed directly on the buttons.

