



Quick Setup

The following instructions will help you connect this receiver to your music system, as well as pair with your tablet, smartphone, or computer.

Step 1: Connect either a Stereo RCA or Digital Optical audio cable from this receiver's rear panel to your music system's audio input.

Step 2: Connect the power adapter to the BTR via the included USB cable and plug the power adapter into an AC outlet.

WARNING · Important Safeguards

3

The receiver will automatically go into pair mode. The LED light will start flashing to indicate the unit is now ready to be paired.

Step 3: Turn ON Bluetooth on your transmitter and go to Bluetooth preferences.

Step 4: Scan listed Bluetooth devices and select "**BTR-250D**" to pair and connect. The LED indicator should turn solid.

Step 5: Make sure your Hi-Fi audio system is turned on and the proper input source is selected.

Step 6: The music on your smart device will now play through your audio system!

Repeat Steps 3 to 6 to add additional devices. The receiver can connect to one smart device at a time, but is capable of remember ing up to 8 devices. Press and hold the Power /Pair button until the indicator starts flashing once to disconnect the receiver from a paired device and put it back into pairing mode.

Note: The BTR will stay in pairing mode for 2 minutes; after 2 minutes the BTR will go into standby. To put the BTR back into pairing mode, simply press the Power/Pair button once.

How to power ON/OFF the receiver without unplugging:

To power off: Press and hold the Power/Pair button for about 2-3 seconds until the indicator no longer illuminates. To Power on: Simple press the Power / Pair button once.

How to Clear the pairing list:

Turn the Bluetooth receiver off, then press and hold the Power/Pair button for roughly 10 seconds until the LED flashes blue once.

2

7

►	Read these instructions. • Object and Liquid Entry Never push objects of any	Object and Liquid Entry Never push objects of any kind into the
►	Keep these instructions.	apparatus through openings as they may touch dangerous voltage points o
►	Heed all warnings.	shortout parts that could result in a fire or electric shock. The apparatus sh not be exposed to dripping or splashing and no objects filled with liquids,
►	Follow all instructions.	such as vases shall be placed on the apparatus. Don't put candles or other
►	Do not use this apparatus near water.	burning objects on top of this unit.
►	Clean only with dry cloth.	
•	Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Only use attachments/accessories specified by the manufacturer.	
•		
►		
•	Unplug this apparatus during lighting storms or when unused for long periods of time.	
	er-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.	
►	 The power supply and power cord for this apparatus is intended for indoor use only. Only use the included A/C adaptor. 	
►		
•	Damage Requiring Service Unplug the apparatus from the wall outlet and refer servicing to qualified service personnel under the following conditions:	
	» When the power-supply cord or plug is damaged.	
	» If liquid has been spilled, or objects have fallen into the apparatus.	
	» If the apparatus has been exposed to rain or water.	
	» If the apparatus does not operate normally by following the operating instructions.	
	» Adjust only those controls that are covered as an improper adjustment of other control- will often require extensive work by a quali	s may result in damage and
	apparatus to its normal operation.	
	 apparatus to its normal operation. » If the apparatus has been dropped or dama 	ged in any way.