

# RR2160 Retro Receiver: Using Internet Radio and Setting/Removing Favorites

## Using the Internet Radio

The RR 2160's Internet Radio source connects you to a huge library of radio stations that are available for free streaming over the Internet.

1. Make sure the RR 2160 is connected to your home network using an Ethernet cable and the rear Ethernet input (R3).
2. Select the Internet Radio input using the Source button (F18) or by pressing the NET source selector button on the remote (C3).
3. Sort the available stations by pressing MENU (C6 on the remote, F8 on the front panel) and using the Up and Down Navigation buttons on the remote (C7) or the Tuning Up and Tuning Down buttons on the front panel (F6 and F7) to scroll through the available categories. Use the ENTER button (C17 on the remote, F9 on the front panel) to select options from the list, and use MENU to move backward through the list.

*Top level options include Favorites, Location, Genre, and Podcast. Location starts at region or continent, then lists countries. For some countries, there is an additional breakdown for states and for individual cities.*

4. Once a category has been selected, use the Up and Down Navigation buttons on the remote (C7) or the Tuning Up and Tuning Down buttons on the front panel (F6 and F7) to scroll through the available categories.

*The second line of the front panel display will show the name of the chosen station.*

The RR 2160 provides access to a large and regularly-updated list of available online sources. The availability of specific stations or channels is determined by the individual provider. Outlaw Audio cannot guarantee the continued availability of any Internet program source.

## Setting & Removing Favorites with Internet Radio

Navigating through so many stations can be tedious. We recommend saving some of your most liked stations to your favorites list:

1. While listening to a station, press the MEM button, on the remote (C22).
2. The front panel display will show "Add Favorite"  
*If listening to one station, but browsing through a list of others, pressing the MEM button will add the station that is currently displayed on the front panel (whether you are listening to it or not).*
3. To view your favorites, navigate to the Top level option of "Favorites". Then, press the ENTER button (C17 on the remote, F9 on the front panel).

While viewing a station on your favorites list, you may press and hold the MEM button for roughly 2 seconds to remove it from your favorites list. The front panel display will then show "Del Favorite".

Note: When adding stations to your favorites' list, the most recently added station will be placed at the top of your list. Each previously added station will be cascaded down the list sequentially.