



 
OSB-1 Outlaw Sound Bar Quick Start Guide

1 What's in the Box?

1 OSB-1 Outlaw Sound Bar




1 Mounting Template



Instruction Manual



2 tall feet

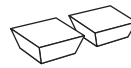


4 short feet




Remote Control (with battery)



AC Power Supply

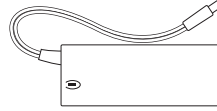


Power Supply Cable

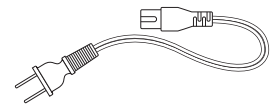

1 Optical Cable




 Inverse Control Panel Label




2 Where should you locate your sound bar?

The OSB-1 can be used as a set-top or shelf-mounted speaker. Self-adhesive rubber feet are included to prevent vibration, protect the mounting surface and serve to angle the speaker up or down if needed.

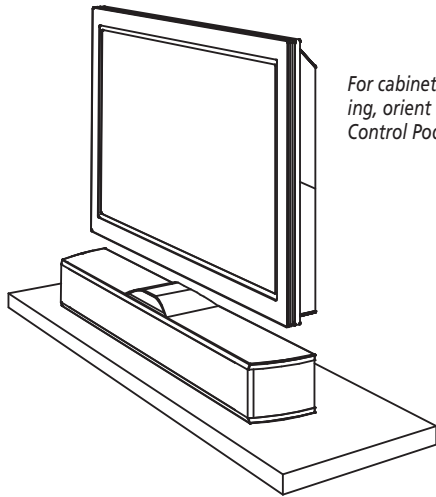

For cabinet or shelf mounting, orient the speaker with Control Pod on the top.

You may also simply mount the speaker to the wall using the built-in keyhole brackets or attach it to a suitably equipped articulating flat-panel TV wall mount via the threaded inserts on the rear panel of the OSB-1.

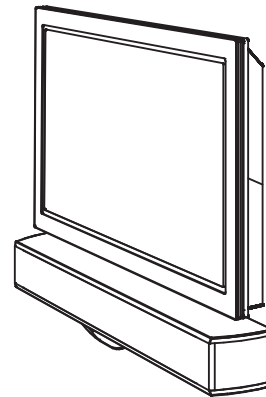

For wall mounting (or mounting on a TV bracket), orient the speaker with Control Pod on the bottom


Side view



Use the 4 Small round rubber spacers for level placement


Rubber feet

Side view

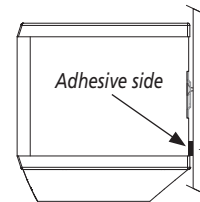


Use 2 of the small round rubber spacers to isolate the speaker from the wall

Rubber foot

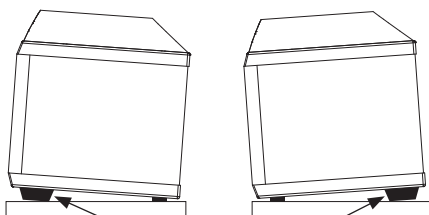

Use the 2 large rectangular feet with 2 of the small round rubber spacers for angled placement

Use taller feet for up or down tilt

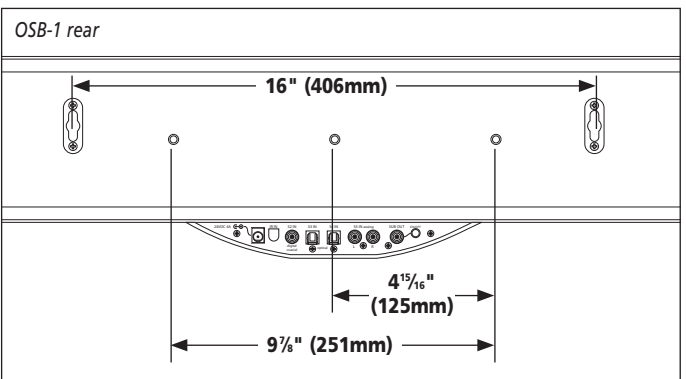


3 Wall Mounting?

If you're planning to wall-mount your OSB-1 in the inverse position (with the control pod on the bottom) you will need to make a few modifications.


Step 1

Remove label from Front Control Panel by peeling down from the edge.

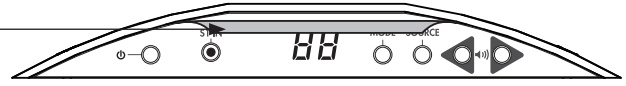

Step 2

Apply included inverse control panel label.

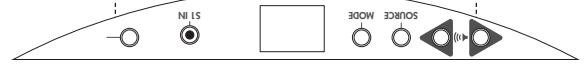

Step 3

Turn unit over. Make sure unit is in **STANDBY**. Press and hold both the **UP** and **DOWN** Volume keys at the same time until the Central Display reads "UP" as shown. (To switch orientation back, simply perform this operation again.)




Step 4

Remove and rotate the grille. To do so, gently pry the grille free from the cabinet starting at both ends. Continue to gently pry the grill off moving towards the center of the cabinet. Do not use a tool or pick as this may damage the cabinet. Once the grille is free, rotate and reattach. Make sure to line up the grille trees with the mounting cups. Press firmly until the grille is once again flush with the cabinet.

4 How should you connect it?


For optimum performance connect all your sources directly to the OSB-1 using the digital output from each source. This will guarantee the highest sound quality and reduce the risk of signal loss.

Plug Power Cable into AC Receptacle

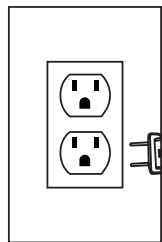


Connect Power Supply Cable to Power Supply

Connect Power Supply to Power Input Jack on OSB-1

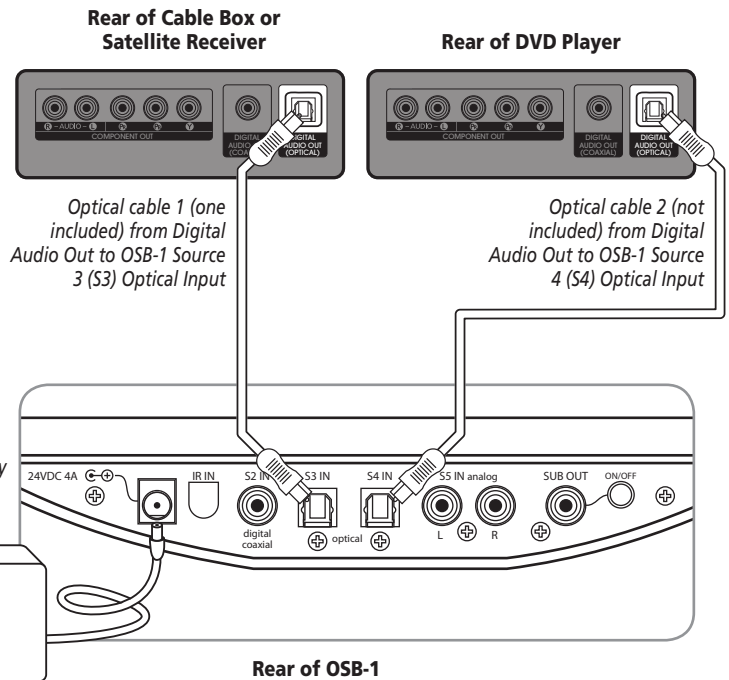

5 Enjoy!

- Remove battery insulator tab from remote.
- Turn unit on.
- Select source.
- Adjust volume.
- Enjoy!

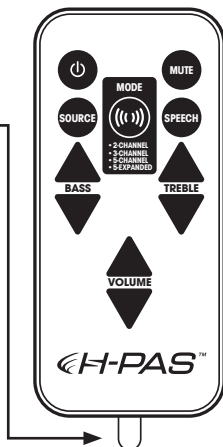

See Instruction Manual for detailed information.

If you have a question or comment contact us. Call Outlaw Audio Customer Service: 866-OUTLAWS (688-5297) or 866-OUTLAWA (688-5292). (M-F 9-5 EST) or via our online support at <http://support.outlawaudio.com>.